


GPC Cyclone Dust Removal Case Study

Cranberry Powder Removal

Aerodyne Environmental tested cranberry powder from food processing in our GPC-18 test lab. The test was done at room temperature and with a pressure drop of 4.5" W.C. through the cyclone. The dust loading was 30 grains/ft³. The cranberry powder sample tested had a particle size distribution as shown in the graph below. Its mean particle size was 75 micron.

The GPC-18 cyclone got 97%* removal of the material.

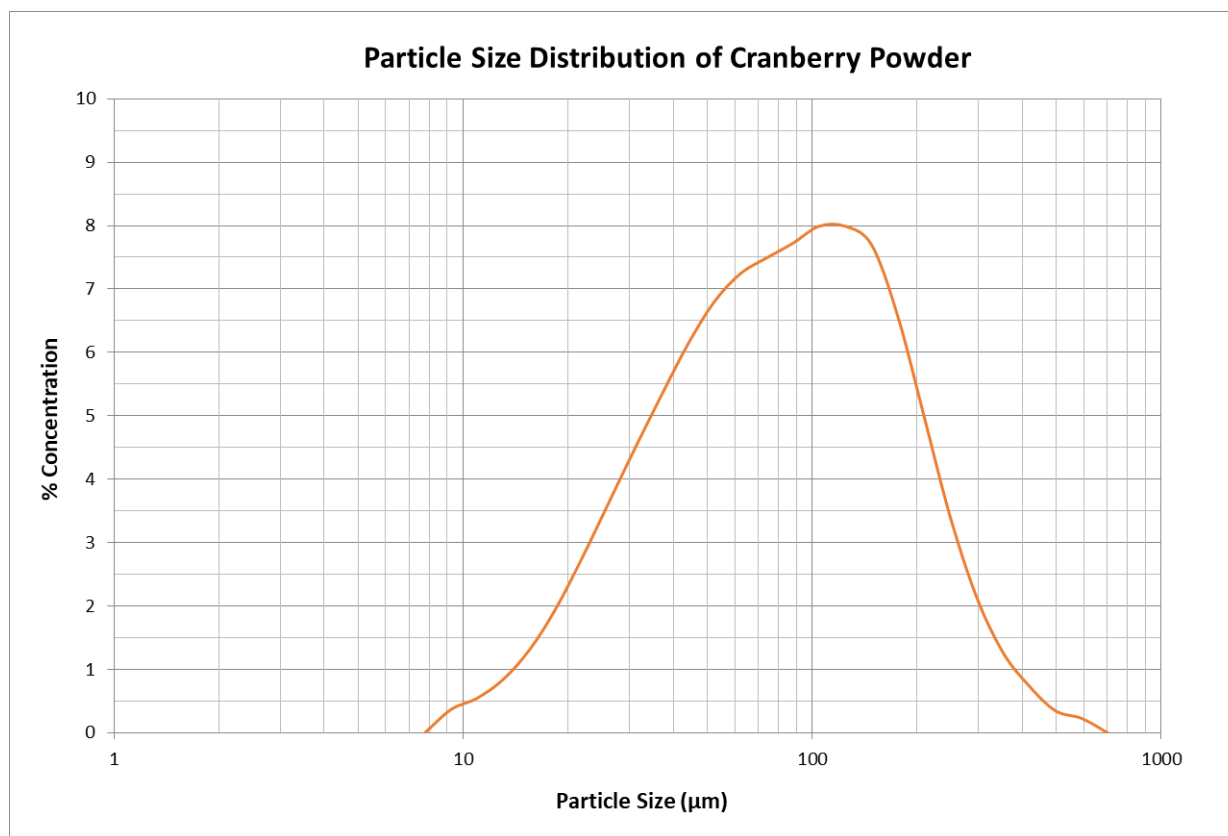

* Please note that particle removal efficiency is based on multiple factors in the process, including but not limited to cyclone size, pressure drop through the cyclone, particle size distribution, particle geometry, and material density. This test is a representative test, and results for your application may be different based on the above conditions.